

2002 Lexus Navigation System

Quick Reference Guide

NORTH-UP AND MAP SCALE Symbol

This symbol indicates a map view with North-up. Press this symbol to change the map view to a head-up perspective. This symbol also indicates the map scale.

GLOBAL POSITIONING SYSTEM (GPS) Mark

This mark is displayed whenever the GPS receiver within the navigation ECU is tracking the vehicle position.

CURRENT VEHICLE POSITION Mark

This mark indicates the current position of the vehicle.



MAP/VOICE Button

Push this button to repeat a Guidance voice, cancel the one touch scroll and start a Guidance.

DESTINATION Button

Push this button to display the DESTINATION screen.

OPTION Button

Push this button to display the OPTION screen.

MENU Button

This screen allows you to make adjustments or to correct settings of various options and functions.

ZOOM IN/ZOOM OUT Buttons

These symbols magnify or reduce the map scale.

SAFETY INSTRUCTIONS

This system is intended to assist you in reaching your destination and, if used properly, can do so. To use your system as safely as possible, follow all safety instructions.

YOU, AS THE DRIVER, ARE SOLELY RESPONSIBLE FOR THE SAFE OPERATION OF YOUR VEHICLE AND THE SAFETY OF YOUR PASSENGERS. DO NOT USE ANY FEATURE OF THIS SYSTEM TO THE EXTENT IT DISTRACTS YOU FROM SAFE DRIVING. YOUR FIRST PRIORITY WHILE DRIVING SHOULD ALWAYS BE THE SAFE OPERATION OF YOUR VEHICLE.

- Before attempting to use this system while driving, learn how to use it. Read the entire Navigation System Manual to make sure you understand the system. Do not allow others to use this system until they have read and understand these and other instructions in this manual.
- You can input your destination and select your route only when your vehicle is not moving. While driving, listen to the voice instructions as much as possible and glance at the screen briefly and only when safe.
- The data in the system may occasionally be incomplete. Road conditions, including driving restrictions (no left turns, street closures, etc.) frequently change. Therefore, before you follow any instruction from the system, look to see whether you can comply with the instruction safely and legally.
- This system cannot warn you about such things as the quality of a neighborhood, street conditions, and availability of emergency services. If you are unsure about the safety of an area, don't drive into it.

UNDER NO CIRCUMSTANCES IS THIS SYSTEM A SUBSTITUTE FOR THE DRIVER'S PERSONAL JUDGMENT.

- The map database is normally updated once a year. Contact your dealer for information about the availability and pricing of an update.
- Use this system only in locations where it is legal to do so. Some states/provinces may have laws prohibiting video screens within sight of the driver.

Touchscreen Navigation

LS 430, GS 430/300, LX 470*, RX 300*, SC 430

DESTINATION INPUT



Read the **CAUTION** screen, select English or French, if applicable, and then touch **I agree**.



The map screen appears. Press **DESTINATION** on the navigation face plate.



Make sure that you are in the desired search area. Then touch **Address** to access the address screen.



Touch **House No** and type in the street address number.



Touch **Street** to input the street name and then touch **List**.



Use **▲** and **▼** to scroll up and down. Touch **Enter** to select the desired street.



Touch **Enter** and the system will begin searching the route.



Begin driving.

* Screen images may vary slightly among models.

Touchscreen Navigation


LS 430, GS 430/300, LX 470*, RX 300*, SC 430

POINT OF INTEREST INPUT




Read the CAUTION screen, select English or French, if applicable, and then touch **I agree**.



Press **DESTINATION** on the navigation face plate. Make sure that you are in the desired search area. Then touch  to access the POI screen.



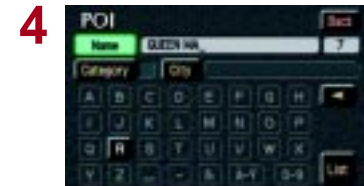


Touch **Name** to type in the name of the POI or touch **Category** to view POI categories.



Input the POI name using the letter keys and then touch **List**.



Use  and  to scroll up and down. Then touch  to select the desired location.



Select the desired route preference and then touch **Enter**.



The system will begin searching the route.



Begin driving.

* Screen images may vary slightly among models.

Additional Navigation Functions

LS 430, GS 430/300, LX 470, RX 300, SC 430, ES 300, IS 300

Point of Interest (POI): Allows you to enter and route to categories such as airports, ATMs, gas stations, golf courses, hotels, restaurants, and Lexus dealers.

Marked Point:: Allows you to mark up to 100 of your favorite destinations including addresses and phone numbers. Retrieve these points by touching Marked Points on the Destination screen.

Previous Destination: Allows you to select one of your ten most recent destinations, saving you time by not having to enter the address again.



1 To view the demo mode, touch and hold **Start** for 10 seconds. A beep indicates that the demo mode has begun.

DEMONSTRATION MODE*



2 To end the demo mode, press **Map/Route** on the navigation face plate.

* Screen images may vary slightly among models

SPEECH COMMANDS (LS 430 ONLY)

Press the speech command switch on the steering wheel command module to activate the speech command option of the Lexus LS 430 Navigation System. After you hear a beep, say one of the speech commands listed below. The navigation system will confirm your command by asking, "Are you sure you want to (repeat command)?" for some commands that affect the route guidance. Press the speech command switch and reply yes or no.

For a complete list of possible speech commands, please consult the Lexus Navigation System Owner's Manual.

| DESTINATION | GUIDANCE HELP | POI DISPLAY (CONT.) |
|--|--|--|
| *Go home *Go to starting point | Repeat guidance Show route Show destination Show (next, first, second, third, fourth, fifth, final) waypoint | Restaurant (American, Continental, French, Mexican, Japanese) POI off |
| DESTINATION FROM LIST | GUIDANCE MODE CHANGE | REPLY |
| *Go to marked point *Go to previous destination *Number one *Number two *Number three *Number four *Number five | Change to arrow guidance Change to turn list guidance Change to single screen Change to split screen | Yes No |
| MAP OPERATION | POI DISPLAY | ROUTE CHANGE |
| Current position Zoom in, Zoom out Minimum/Maximum scale Change to north up Change to heading up Mark (to register a point) | Airport ATM Automobile club Bank Gas station Grocery store Hospital Lexus dealership Parking garage/Parking lot Police station Rest area | *Cancel guidance *Reroute *Detour *Alternate roads *Delete (next, first, second, third, fourth, fifth, final) waypoint |
| | | VOLUME |
| | | Louder Softer Voice guidance off Voice guidance on |

*Speech commands that require confirmation.




Navigation with Tabs

ES 300 ONLY

DESTINATION INPUT



Read the **CAUTION** screen, select English or French and then touch **I agree**.

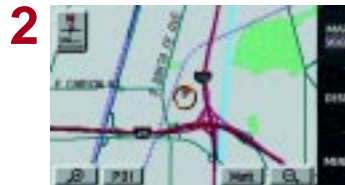


The map screen appears. Touch the tab on the navigation screen.




Make sure that you are in the desired search area. Touch to access the address screen.



Touch **House No** and type in the street address number.

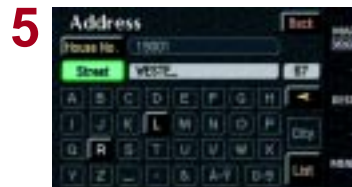

Touch **Street** to input the street name and then touch **List**.

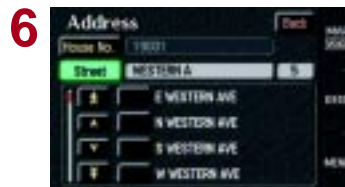

Use **▲** and **▼** to scroll up and down. Touch to select the desired street.



Touch **Enter** and the system will begin searching the route.



Begin driving.

Navigation with Tabs

ES 300 ONLY


POINT OF INTEREST INPUT

1



Read the CAUTION screen, select English or French and then touch **I agree**.

2

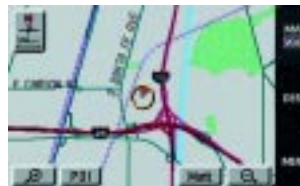

The map screen appears. Touch the **DEST** tab on the navigation screen.

3




Make sure that you are in the desired search area. Then touch **Go to** to access the POI screen.

4



Touch **Name** to type in the POI name or touch **Category** to view POI categories.

5

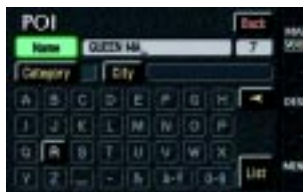

Input the POI name using the letter keys and touch **List**.

6



Use **Up** and **Down** to scroll up and down. Touch **Enter** to select the desired location.

7



Select desired route preference or touch **Enter**.

8



Begin driving.

Remote Control Navigation

ES 300 ONLY

DESTINATION INPUT



Read the **CAUTION** screen, use to select English or French and press .



Use to select **I agree** and press . The map screen appears. Press on the remote control in the center console.



Make sure that you are in the desired search area. Use to select and press to access the address screen.



Use to select **House No.** and press . To type in the street address number, use to select the number and press .



Use to select **Street** and press to input the street name and then select .



Use to scroll the list of streets. To select the desired street, select and press .



Select enter and press . The system will begin searching the route.



Begin driving.

Remote Control Navigation

ES 300 ONLY

POINT OF INTEREST INPUT



Read the **CAUTION** screen, use to select English or French and press .



Then use to select **I agree** and press .



Press on the remote control. Make sure that you are in the desired search area. Use to select and press to access the POI screen.



Use to select **Home** and press or select **Category** to view POI categories.



To type in the POI name, use to select the letters and press . Select **List** and press .



Use to scroll the list of streets. Select of the desired street and press .



Select enter and press . The system will begin searching the route.



Begin driving. To add another destination, repeat steps 2–6, highlight **Add** and press . To delete the current destination, highlight **Remove** and press .