

SECTION III

MORE ADVANCED FUNCTIONS

Convenient features

Setup	84
Map color	85
Auto reroute	85
Estimated travel time	86
Adjusting time zone	87
Distance indication	88
Notifying seasonal restriction	89
Voice guidance in all modes	90
Current street name	91
Maintenance information	91
Dealer setting	93

 
Setup

You can set the values shown on the Set-up screen.

1. Push the “MENU” button.



2. Touch the “Setup” switch to display the Setup screen. Select your desired items you want to set. Selected items will be highlighted in green.

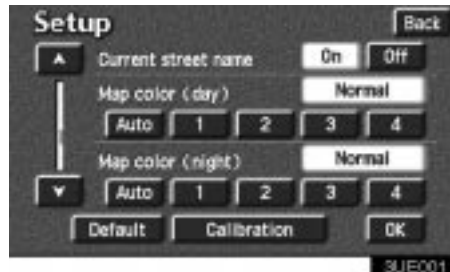

3. Touch the “OK” switch on the screen and the previous screen returns.

To default: Touch the “Default” switch on the screen. All of the settings can be defaulted.

Map color (day or night): You can select your desired map color.

Auto reroute: You can set the system will or will not automatically search for a new route to the destination.

Estimated travel time: You can set to display the time required to reach the destination on the road guidance screen.

Adjust time zone: You can select your desired time zone.

Distance: You can change “km” or “miles” to display your desired units.

 
Notify seasonal restrict: You can select to notify or not to notify a seasonal restriction.

Voice guide in all modes: You can set the voice guide in all modes or not.

Current street name: You can select to show or not to show a current street name on the Map screen.

MAP Color

1. Push the “MENU” button.
2. Touch the “Setup” switch.

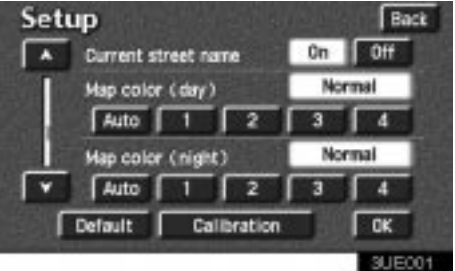

3. Select your desired day and/or night Map color and then touch the “OK” switch to return the Map screen. See “The map color list” below for details.

Touch the “Normal” switch to default the Map color.

Touch the “Auto” switch to select the Map color automatically. The Map color is changed in every three month.

The Map color list

Switch NO.	Map color	“Auto” mode
1	Green	Mar.–May
2	Blue	Jun.–Aug.
3	Gray	Sep.–Nov.
4	Beige	Dec.–Feb.

Auto Reroute

When the auto reroute feature is turned on, the system will automatically search for a new route to the destination if you leave the guidance route. This feature does not operate while you are driving on roads where the guidance is not available.



1. Push the “MENU” button to display the Menu screen, and touch the “Set-up” switch.



III

Auto Reroute



2. Touch the “On” switch of the “Auto reroute”. If you can not find the item on the list, touch  or  switch to scroll the list.

INFORMATION

If your vehicle leaves the guidance route, the system searches for a new route to the destination. The new route may or may not take you back to the previous route depending on how far you are off the original guidance route.

Estimated Travel Time



When the estimated travel time feature is turned on, the time required to reach the destination is displayed on the Route guidance screen.



To turn the Estimated travel time on:

1. Push the “MENU” button to display the Menu screen, and touch the “Set-up” switch.



2. Touch the “On” switch of the Estimated travel time. If you cannot find the item on the list, touch  or  switch and scroll the list.

Estimated Travel Time



To set the average speeds:

1. Touch the “Change speed” switch of Estimated travel time.

2. Touch or to set the average vehicle speeds for driving on a Freeway, Main street and Residential area.

If you touch the “Default” switch, the default speed is set at each item.

3. After you finish setting the desired speeds, touch the “OK” switch. The Set-up screen returns.

INFORMATION

- The displayed time to the destination is the approximate driving time calculated based on the speeds you selected and your actual position along the guidance route.
- The time shown may vary greatly depending on your progress along the route (which may be affected by road conditions such as traffic jams, construction work, etc.)
- Up to 99 hours 59 minutes can be displayed.

Adjusting Time Zone

1. Push the “MENU” button.



2. Touch the “Setup” switch.





III

Adjusting Time Zone

3. Touch the “Adjust” switch, the Adjust time zone screen appears on the display.



4. Select your desired time zone. Selected switch is highlighted in green.

Touch the “On” switch and then touch  or  switch to set the daylight saving time.

 
5. Touch “OK” switch on the screen and the “Setup” screen returns.

Distance Indication

1. Push the “MENU” button.



2. Touch the “Setup” switch.

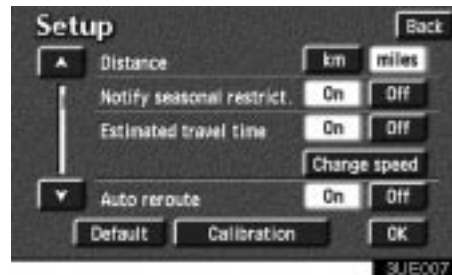

3. Touch “km” or “miles” to select your desired units.

 
4. Touch the “OK” switch.

Notifying Seasonal Restriction


1. Push the “MENU” button.



2. Touch the “Setup” switch.

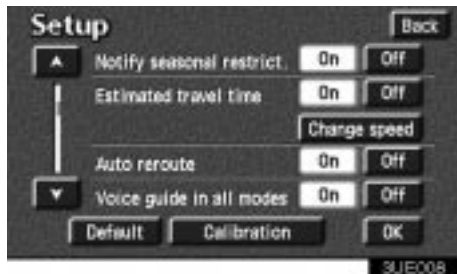

 3. Touch the “On” switch of the Notify seasonal restrict and then touch “OK” switch. The screen return to the current position map.

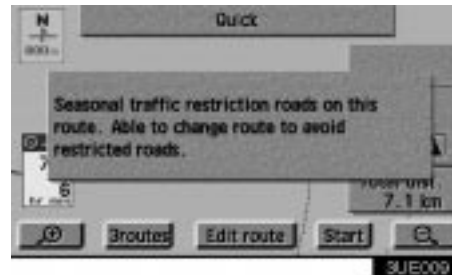

The restricted road icon and the message may appear on the screen.

Voice Guidance in All Modes

1. Push the “MENU” button.



2. Touch the “Setup” switch.



 
3. Touch the “On” switch on the right of “Voice guide in all modes”.

Current Street Name

1. Push the “MENU” button.




2. Touch the “Setup” switch.

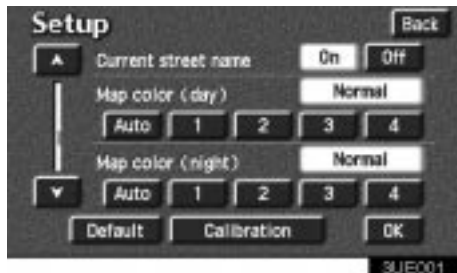

3. Touch the “On” switch on the right of Current street name.

 The current street name appears on the Map screen.

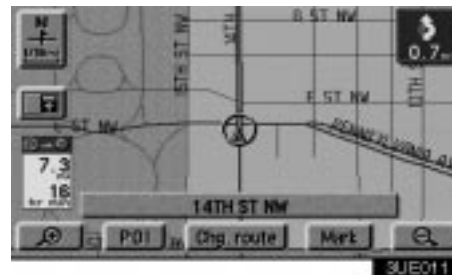

Maintenance Information



This system has a function which informs you of the time to replace certain parts or components as well as other information shown on the screen. (See “Information Items” on page 93.) When the system begins operating after reaching either the Information Item’s date or driving distance, the Information screen will be displayed.

The Information screen will not be displayed again by touching the “**Do not display this message again**” switch.

III

Maintenance Information




1. Push the “INFO” button to display the Information Menu screen. Touch the “Maintenance” switch to display the Maintenance screen.

2. Touch your desired icon and input the conditions.



Date of notice: Input the next maintenance date.

Distance of notice: Input the driving distance until the next maintenance check. You can input a five-digit number for the driving distance.

When you touch the  switch on the screen, the screen changes to display the change name screen. Touch the keys to input your desired name and then input the conditions.

After you input that information, touch the “OK” switch. The screen then returns to the Maintenance screen. The icon’s color will change to green after the date or driving distance are input. The icon’s color will change to orange when your vehicle needs to be serviced. The following switches appear on the Maintenance screen.

Delete all: Cancel all conditions which have been input.

Reset all: Reset the item which has satisfied either condition.

Touch the “Off” switch of the Maintenance screen, and the Information screen will no longer be displayed.

INFORMATION

- *For scheduled maintenance information, please refer to the “Owner’s Manual Supplement / Scheduled Maintenance”.*
- *Depending on your driving or the road conditions, the system may have a time-lag between the data which has been input and the actual date and driving distance.*

Maintenance Information

Information items



Oil change



Replace oil filter



Rotate tires



Replace tires



Replace battery



Replace brake linings



Replace wiper blades



Replace engine coolant



Replace brake fluid



Replace ATF



Scheduled maintenance



Replace air filter



Personal

Dealer Setting



You can register your dealer's name and address. Touch the **"Set dealer"** switch on the Maintenance screen.

 
III

Dealer Setting

(a) Registering dealer



1. Enter your dealer's location address in the same way as you input any destination. (See page 10 through 26.)

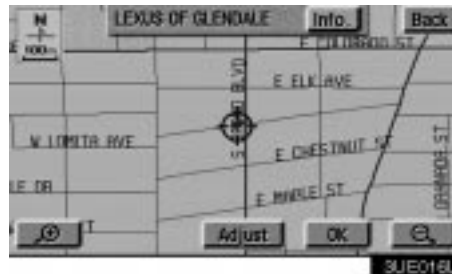

2. After you enter your dealer, the screen changes and displays the map location of the dealer. If it is OK, touch the "OK" switch.

The current screen changes to the screen where you can edit the data of your dealer. (See (b) Editing dealer.)

By touching the "View map" switch of Edit dealer screen. You can see the location of the dealer. (See "Entering Destination" on page 26.)

(b) Editing dealer



1. Touch the "Set dealer" switch and touch the "Change" switch of the item to edit.

Dealer Setting

 
- Editing the name of the dealer or staff in charge



Touch alphabet or numeral keys directly to input the name.

After you finish your entry, touch the “OK” switch. The previous screen will be displayed.

- Editing the location

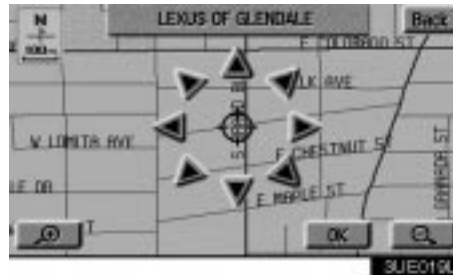


Touch the arrows to scroll to your desired point on the Map screen.

Touch the “OK” switch when the cursor moves to your desired point.

The previous screen will be displayed.

 - Editing the phone number

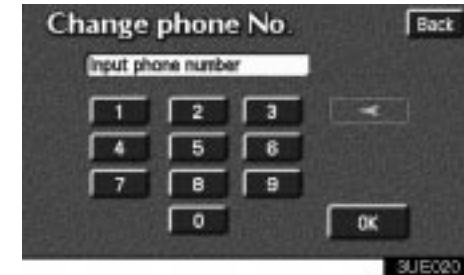

Touch numeral keys directly.

After you finish your entry, touch the “OK” switch.

The previous screen will be displayed.

After you finish any editing, touch the “Back” switch.

 
III

Dealer Setting

(c) Deleting dealer



1. Touch the “Set dealer” switch and touch the “Delete dealer” switch.

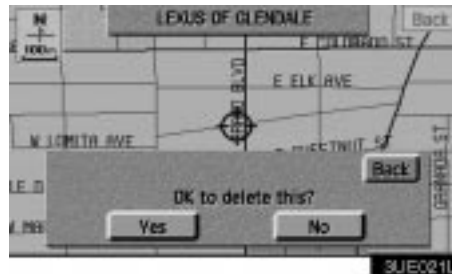

2. A selected point will appear. Also, a message will appear at the bottom of the screen. To delete, touch the “Yes” switch. To cancel the deletion, touch the “No” switch.