

**SECTION *III***

---

**MORE ADVANCED FUNCTIONS**

**Convenient features**

Automatic rerouting ..... 79

Time to destination ..... 79

Maintenance information ..... 81

Dealer setting ..... 83



## Automatic Rerouting


When the "Automatic Rerouting" feature is turned on, the system will automatically search for a new route to the destination if you leave the guidance route. This feature does not operate while you are driving on roads where the guidance is not available.

To turn the "Automatic Reroute" mode on:

1. Push the "MENU" button on the automatic air conditioning control panel.



2. Touch the "Guidance Setup" switch.

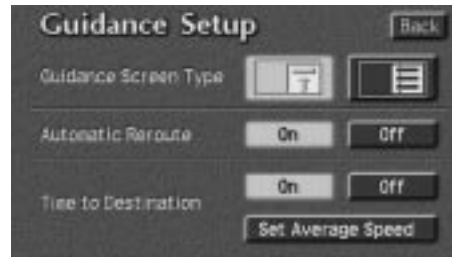

3. Touch the "On" switch on the right of "Automatic Reroute".

Selected switch is highlighted in green.

### INFORMATION

*If your vehicle leaves the guidance route, the system searches for a new route to the destination. The new route may or may not take you back to the previous route depending on how far you are off the original guidance route.*

## Time to Destination

When the "Time to Destination" feature is turned on, the time required to reach the destination is displayed on the route guidance screen.



To turn the "Time to Destination" mode on:

1. Push the "MENU" button on the automatic air conditioning control panel.

## Time to Destination



2. Touch the "Guidance Setup" switch.



3. Touch the "Set Average Speed" switch on the "Guidance Setup" screen.



4. Touch ◀ or ▶ to set the average vehicle speeds for driving on a freeway, main street and residential area.

If you touch the "Default" switch, the default speed is set at each item.

5. After you finish setting the desired speeds, touch the "Enter" switch.

6. The guidance setup screen returns. Touch the "On" switch on the right of "Time to Destination".


Selected switch is highlighted in green.

### INFORMATION

- The displayed time to the destination is the approximate driving time calculated based on the speeds you selected and your actual position along the guidance route.
- The time shown may vary greatly depending on your progress along the route (which may be affected by road conditions such as traffic jams, construction work, etc.).
- Up to 99 hours 59 minutes can be displayed.

III

## Maintenance Information

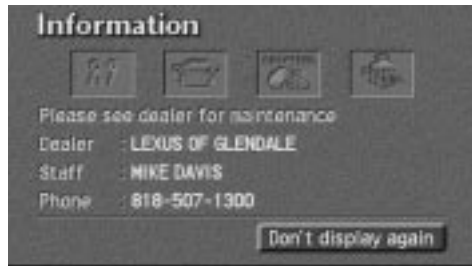

This system has a function which informs you of the time to replace certain parts or components as well as other information shown on the screen. (See "Information Items" on page 82.) When the system begins operating after reaching either the Information Item's date or driving distance, the "Information" screen will be displayed.

The "Information" screen will not be displayed again by touching the **"Don't display again"** switch.



Push the "INFO" button on the automatic air conditioning control panel to display the "Maintenance" screen. Touch your desired icon and input the conditions.



**Date:** Input the next maintenance date.

**Distance:** Input the driving distance until the next maintenance check. You can input a five-digit number for the driving distance.

After you input that information, touch the **"OK"** switch. The screen then returns to the "Maintenance" screen. The icon's color will change to green after the date and driving distance is inputted. The icon's color will change to orange when your Lexus needs to be serviced. The following switches appear on the screen.

**Delete All:** Cancel all conditions which have been inputted.

**Reset Expired:** Reset an item which has satisfied a condition.

## Maintenance Information

Touch the **"OFF"** switch at the top of the screen, and the information screen will no longer be displayed.

### INFORMATION

- For scheduled maintenance information, please refer to the "Scheduled Maintenance Guide" or "Owner's Manual Supplement".
- *Depending on your driving or the road conditions, the system may have a time-lag between the data which has been inputted and the actual date and driving distance.*

### Information Items



Scheduled Maintenance



Oil Change



Replace Oil Filter



Rotate Tires



Replace Tires



Replace Battery



Replace Brake Pad



Replace Wiper Blades



Replace Engine Coolant



Replace Brake Fluid



Replace Automatic Transmission Fluid



Replace Air Conditioning Filter



Replace Air Cleaner Filter



Wedding Anniversary



Birthday

III

## Dealer Setting



You can register your dealer's name and address. Touch the **"Dealer"** switch on the "Maintenance" screen.

### (a) Registering dealer



1. Touch the **"Register Dealer"** switch.

2. Enter your dealer's location address in the same way as you input any destination. (See page 10 through 33.)



3. After you enter your dealer, the screen changes and displays the map location of the dealer. If it is OK, touch the **"Enter"** switch.

The current screen changes to the screen where you can edit the data of your dealer. (See (b) Editing dealer.)

By touching the **"Go to Dealer"** switch the system sets your dealer as a destination. (See (d) Going to dealer.)

## Dealer Setting

### (b) Editing dealer



1. Touch the "Edit Dealer" switch.



2. Touch the item to edit.


### • Editing a "Dealer" or a "Staff"



Touch alphabet or numeral keys directly to input the name.

After you finish your entry, touch the "Enter" switch at the bottom right of the screen. The previous screen will be displayed.

### • Editing a "Position"

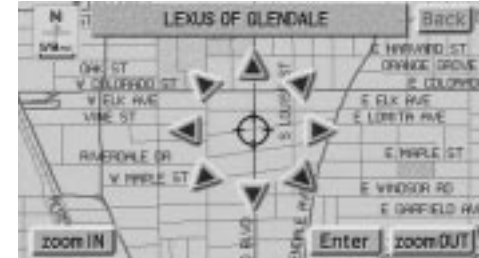

Touch the arrows to scroll to your desired point on the map screen.

Touch the "Enter" switch when the cursor moves to your desired point.

The previous screen will be displayed.

III

## Dealer Setting

- Editing a "Phone" (telephone number)



Touch numeral keys directly.

After you finish your entry, touch the "Enter" switch at the bottom of the screen.


The previous screen will be displayed.

After you finish any editing, touch the "OK" switch.

- (c) Deleting dealer



1. Touch the "Delete Dealer" switch.

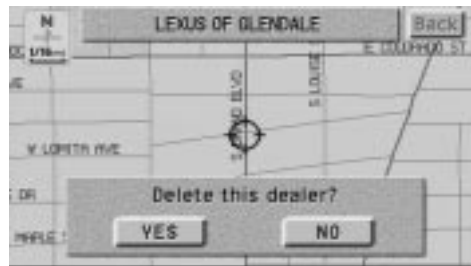

2. A selected point will appear. Also, a message will appear on the bottom of the screen. To delete, touch the "YES" switch. To cancel deletion, touch the "NO" switch.

- (d) Going to dealer

The registered dealer can be set as a destination.



Touch the "Go to Dealer" switch. The screen changes and displays the map location of the registered dealer and the route preference. (See "Entering Destination" on page 33.)