

BASIC OPERATION

QUICK REFERENCE

 









 








Driver's seat	2
Steering wheel	2
Automatic transmission	3
Headlight and turn signal switch	4
Wiper switch	5

QUICK REFERENCE

1. DRIVER'S SEAT




Seat adjustment

	Seat position		
	Seat cushion angle		
	Seat cushion height		
	Seatback angle		
	Lumbar support		
	Head restraint height		
	Head restraint angle		

2. STEERING WHEEL

• TILT STEERING WHEEL

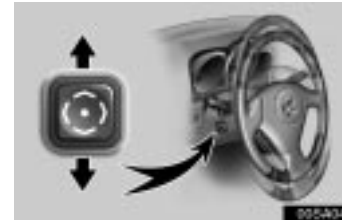

To tilt the steering wheel up or down to the desired angle, push the control switch in the required direction and release the button when the steering wheel reaches the desired angle.

• TELESCOPIC STEERING WHEEL



To move the steering wheel to the desired position, push the control switch away from you or pull it toward you until the steering wheel reaches the desired position.

3. AUTOMATIC TRANSMISSION



SELECTOR LEVER POSITION

- P:** Parking, engine starting and key removal position
- R:** Reverse position
- N:** Neutral position
- D:** Normal driving position (Shifting into overdrive possible)
- 4:** Position for engine braking (Shifting into overdrive not possible)*
- 3, 2:** Position for more powerful engine braking
- L:** Position for maximum engine braking

OPERATION OF SELECTOR LEVER



- ★ Shift while pressing the brake pedal. (Ignition switch must be in the "ON" position.)




*When the cruise control is being used, even if you downshift from "D" to "4", engine braking will not be enabled because the cruise control is not cancelled. For the operation to decrease the vehicle speed, see page 207.

QUICK REFERENCE




4. HEADLIGHT AND TURN SIGNAL SWITCH

● HEADLIGHT SWITCH



With the ignition OFF

	Parking, tail, license plate, side marker and instrument panel lights turn on.
	Headlights also turn on.
	Automatic light control


With the engine started and parking brake released

	Parking, tail, license plate, side marker and instrument panel lights turn on.
	Headlights also turn on at full intensity.
	Automatic light control

With the ignition OFF or With the engine started and parking brake released

	High beam
	Headlight flasher

• TURN SIGNAL SWITCH

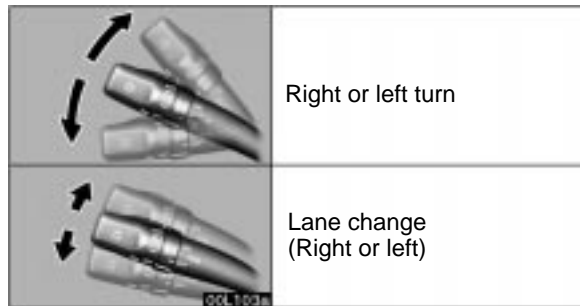

5. WIPER SWITCH

