

SECTION 1 – 7

INSTRUMENTS AND CONTROLS

Theft deterrent

Theft deterrent system 148

Theft prevention labels 150

THEFT DETERRENT

THEFT DETERRENT SYSTEM

To deter theft of the vehicle, this system is designed to sound an alarm if any of the doors, trunk or hood is forcibly unlocked or the battery terminal is disconnected and then reconnected while the vehicle is locked.

The alarm blows the horn intermittently, flashes the headlights, tail lights, turn signal lights and other exterior lights, and illuminates the interior lights.



Setting the system

1. If the retractable hardtop is opened, close it.
2. Turn the ignition switch to the "LOCK" position and remove the key.

The engine immobiliser system causes the indicator light to flash.

3. Close and lock all the doors, trunk and hood using an ignition key or wireless remote control.

If you lock them with wireless remote control, the turn signals flash once.*

*NOTE: *The turn signals can be set not to flash. Ask your Lexus dealer for details.*

The flashing indicator light remains on when all the doors, trunk and hood are closed and locked.

4. After 30 seconds, the indicator starts flashing and the system is set.

Cancelling the system

When you unlock any door or trunk using an ignition key or wireless remote control, the system is cancelled.

If you unlock any door or trunk with wireless remote control, the turn signals flash twice.*

*NOTE: *The turn signals can be set not to flash. Ask your Lexus dealer for details.*

Activating the system

The alarm sounds for 60 seconds if any of the following are operated:

- Unlocking any door or trunk without using an ignition key or wireless remote control.
- Opening the hood forcibly.
- Reconnecting the battery.

If any door is unlocked and the ignition key is not in the ignition switch during the alarm sounding, its door is automatically locked.

To stop the alarm: Use either of the following methods.

- Unlock the door or trunk using an ignition key or wireless remote control.
- Turn the ignition switch on.

Testing the system

1. Open all the windows.

2. Set the system as described above.

The doors should be locked with the ignition key or wireless remote control. Be sure to wait until the indicator light starts flashing.

3. Unlock one of the doors from the inside.

The system should activate the alarm.

4. Unlock any of the doors with a key or the wireless remote control to cancel the system.

5. Repeat this operation for the other doors and hood.

When testing the hood, also check that the system is activated when the battery terminal is disconnected and then reconnected.

If the system does not work properly, have it checked by your Lexus dealer.

NOTICE

Disconnecting the battery may result in the erasure of information you have set in the computer memory. After reconnecting the battery, check that the memorized data has been retained. If it has been erased, input it into the computer once more.

THEFT DETERRENT

THEFT PREVENTION LABELS



Your new vehicle carries theft prevention labels which are approximately 56 mm (2.20 in.) by 16 mm (0.63 in.).

The purpose of these labels is to reduce the incidence of vehicle thefts by facilitating the tracing and recovery of parts from stolen vehicles. The label is designed so that once it is applied to a surface, any attempt to remove it will result in destroying the integrity of the label. Transferring these labels intact from one part to another will be impossible.

NOTICE

You should not attempt to remove the theft prevention labels as it may violate certain state or federal laws.