


INSTRUMENT PANEL

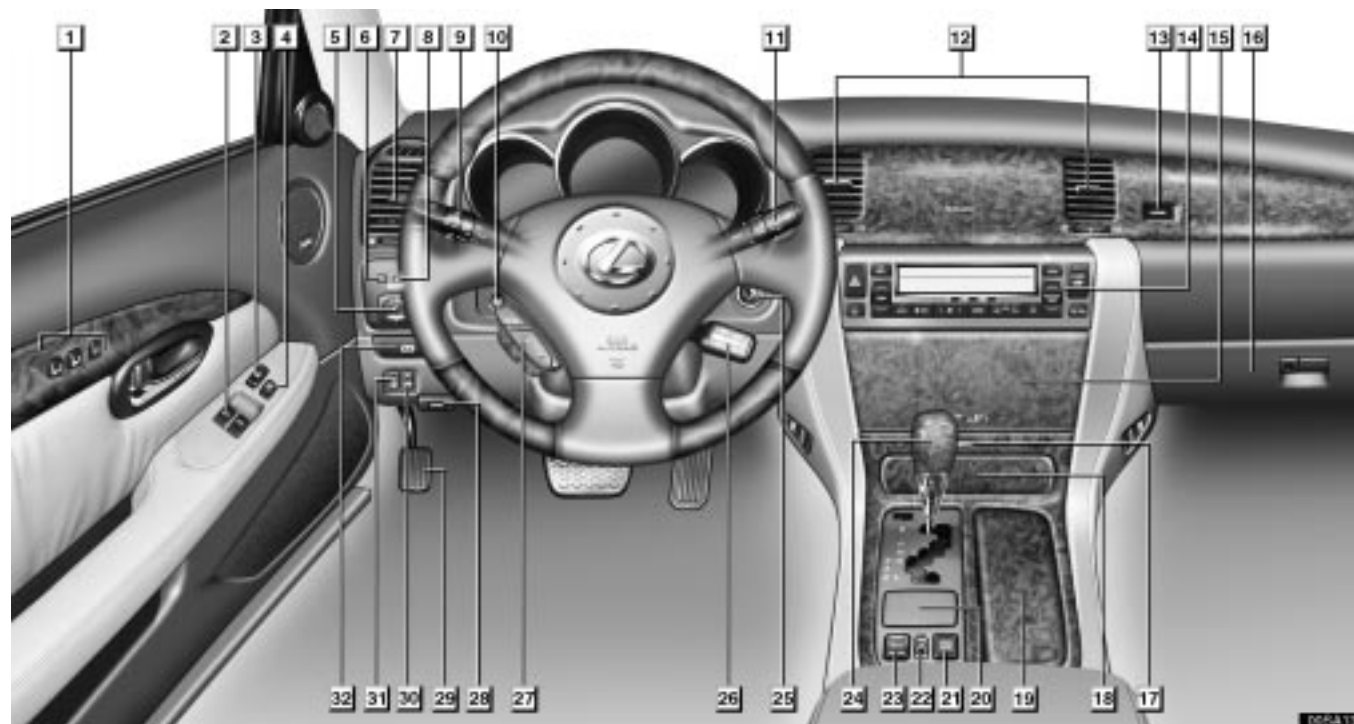


PICTORIAL INDEX

	<i>Page</i>		<i>Page</i>
1	<i>Driving position memory switch</i>	16	<i>Glove box</i>
2	<i>Power window switches</i>	17	<i>Audio door control switch</i>
3	<i>Door lock switch</i>	18	<i>Ashtray/Cigarette lighter</i>
4	<i>Window lock switch</i>	19	<i>Cup holder</i>
5	<i>Power rear view mirror control switch</i>	20	<i>Coin box</i>
6	<i>Headlight cleaner switch</i>	21	<i>Vehicle skid control system OFF switch</i>
7	<i>Side vents</i>	22	<i>Coin box door opener</i>
8	<i>Security indicator light</i>	23	<i>Driving pattern selector switch</i>
9	<i>Headlight, turn signal and fog light switch</i>	24	<i>Automatic transmission selector lever</i>
10	<i>Instrument panel light control</i>	25	<i>Ignition switch</i>
11	<i>Wiper and washer switch</i>	26	<i>Cruise control switch</i>
12	<i>Center vents</i>	27	<i>Steering pad switches</i>
13	<i>Front passenger's seat belt reminder light</i>	28	<i>Hood opener</i>
14	<i>Automatic air conditioning controls</i>	29	<i>Parking brake</i>
15	<i>Car audio</i>	30	<i>Trunk lid opener</i>
		31	<i>Fuel filler door opener</i>
		32	<i>Parking brake release lever</i>

For detailed information, refer to the description given in each section.

INSTRUMENT CLUSTER (Vehicles with compass sold in U.S.A.)

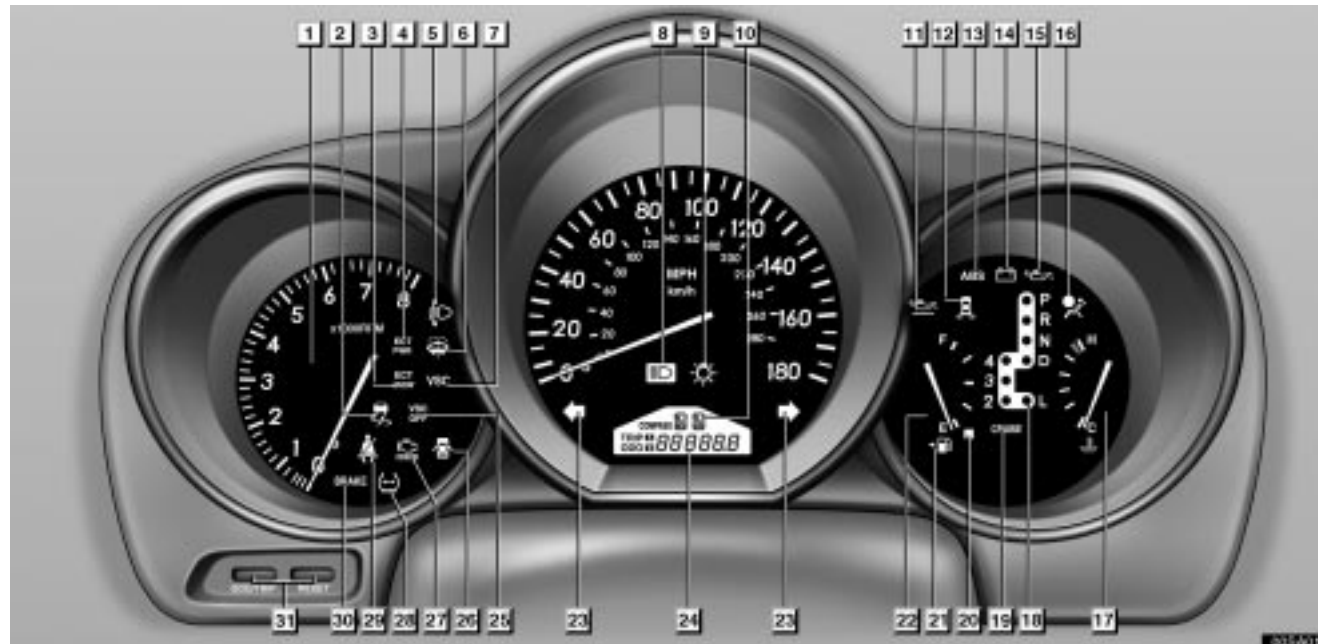

PICTORIAL INDEX

	<i>Page</i>		<i>Page</i>
1 Tachometer	37	16 SRS warning light	42
2 Slip indicator light	208	17 Engine coolant temperature gauge	36
3 Snow mode indicator light	204	18 Automatic transmission indicator lights	197
4 Power mode indicator light	199, 204	19 Cruise control indicator light	205
5 Automatic headlight leveling system warning light	46	20 Low fuel level warning light	51
6 Low washer fluid warning light	46	21 Fuel filler door indicator	87
7 Vehicle skid control system warning light	47	22 Fuel gauge	36
8 Headlight high beam indicator light	24	23 Turn signal indicator light	25
9 Headlight indicator light	22	24 Odometer and trip meter	38
10 Compass	55	25 Vehicle skid control system OFF indicator light	210
11 Low engine oil level warning light	44	26 Open door warning light	46
12 Rear light failure warning light	46	27 Malfunction indicator lamp	44
13 Anti-lock brake system warning light	45	28 Low tire pressure warning light	47
14 Discharge warning light	43	29 Driver's seat belt reminder light	42
15 Low engine oil pressure warning light	43	30 Brake system warning light	40
		31 ODO/TRIP, RESET button	38

For detailed information, refer to the description given in each section.




PICTORIAL INDEX

	<i>Page</i>		<i>Page</i>
1 Tachometer	37	15 SRS warning light	42
2 Slip indicator light	208	16 Engine coolant temperature gauge	36
3 Snow mode indicator light	204	17 Automatic transmission indicator lights	197
4 Power mode indicator light	199, 204	18 Cruise control indicator light	205
5 Automatic headlight leveling system warning light	46	19 Low fuel level warning light	51
6 Low washer fluid warning light	46	20 Fuel filler door indicator	87
7 Vehicle skid control system warning light	47	21 Fuel gauge	36
8 Headlight high beam indicator light	24	22 Turn signal indicator light	25
9 Headlight indicator light	22	23 Odometer and trip meter	38
10 Low engine oil level warning light	44	24 Vehicle skid control system OFF indicator light	210
11 Rear light failure warning light	46	25 Open door warning light	46
12 Anti-lock brake system warning light	45	26 Malfunction indicator lamp	44
13 Discharge warning light	43	27 Low tire pressure warning light	47
14 Low engine oil pressure warning light	43	28 Driver's seat belt reminder light	42
		29 Brake system warning light	40
		30 ODO/TRIP, RESET button	38

For detailed information, refer to the description given in each section.

INSTRUMENT CLUSTER (Vehicles with compass sold in Canada)

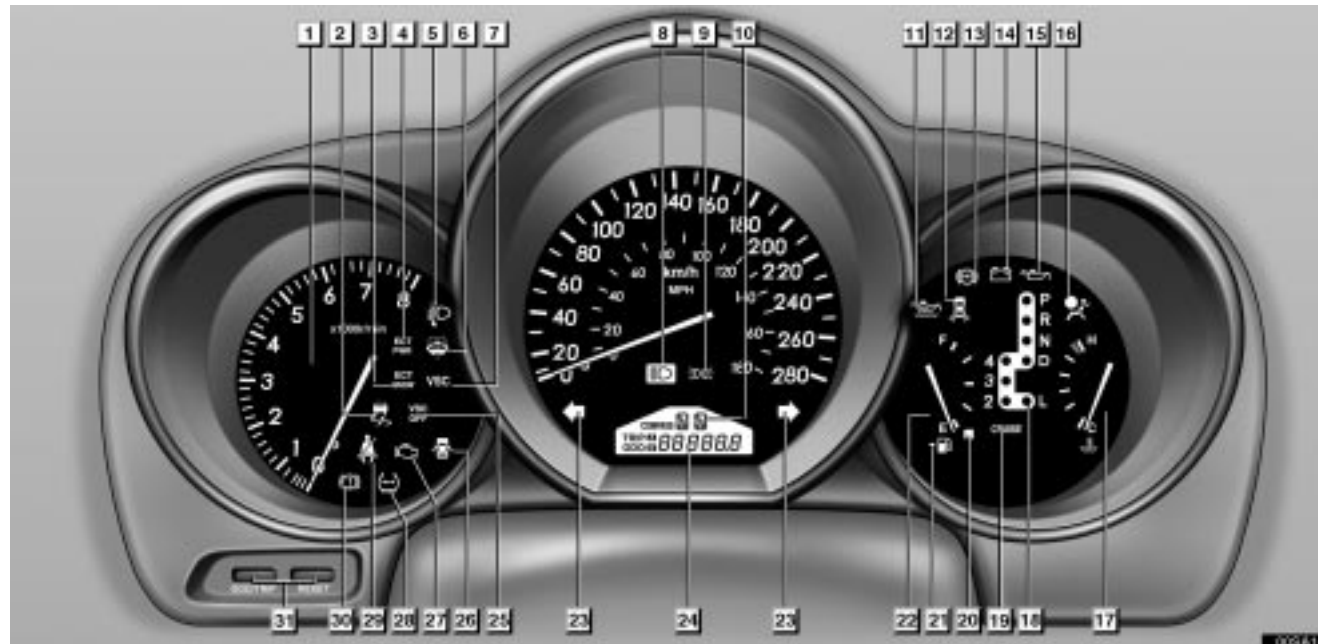


PICTORIAL INDEX

	<i>Page</i>		<i>Page</i>
1 Tachometer	37	17 Engine coolant temperature gauge	36
2 Slip indicator light	208	18 Automatic transmission indicator lights	197
3 Snow mode indicator light	204	19 Cruise control indicator light	205
4 Power mode indicator light	199, 204	20 Low fuel level warning light	51
5 Automatic headlight leveling system warning light	46	21 Fuel filler door indicator	87
6 Low washer fluid warning light	46	22 Fuel gauge	36
7 Vehicle skid control system warning light	47	23 Turn signal indicator light	25
8 Headlight high beam indicator light	24	24 Odometer and trip meter	38
9 Tail light indicator light	22	25 Vehicle skid control system OFF indicator light	210
10 Compass	55	26 Open door warning light	46
11 Low engine oil level warning light	44	27 Malfunction indicator lamp	44
12 Rear light failure warning light	46	28 Low tire pressure warning light	47
13 Anti-lock brake system warning light	45	29 Driver's seat belt reminder light	42
14 Discharge warning light	43	30 Brake system warning light	40
15 Low engine oil pressure warning light	43	31 ODO/TRIP, RESET button	38
16 SRS warning light	42		

For detailed information, refer to the description given in each section.

INSTRUMENT CLUSTER (Vehicles without compass sold in Canada)

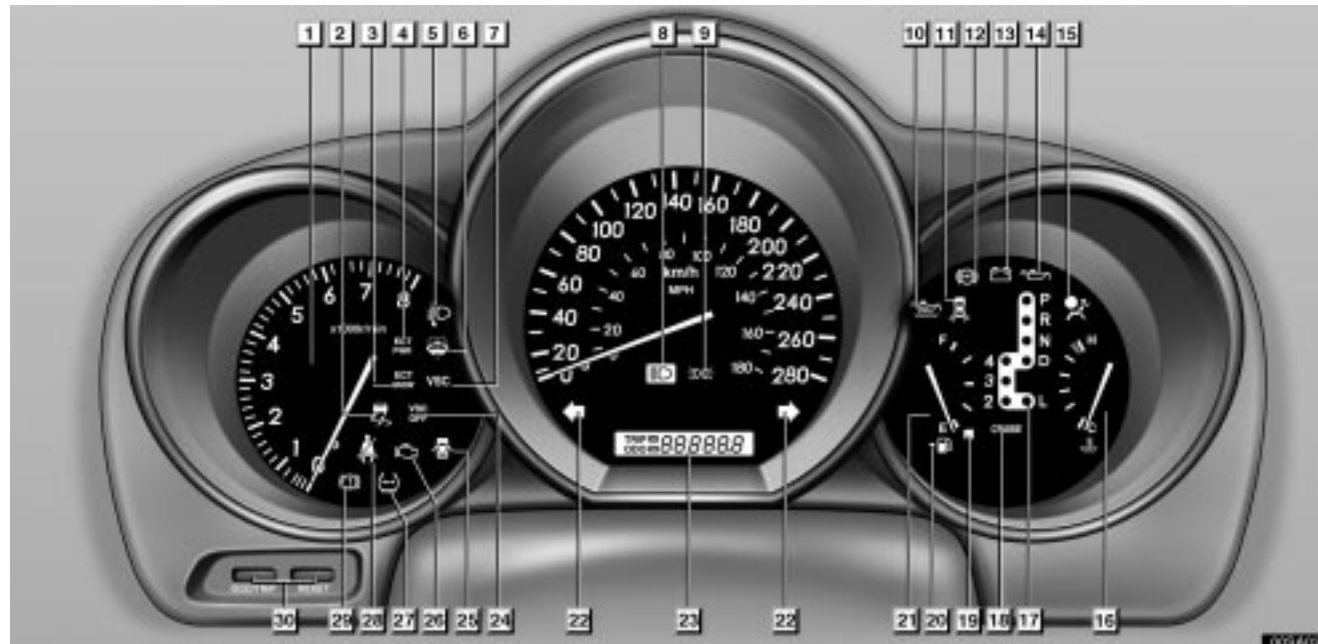


PICTORIAL INDEX

	<i>Page</i>		<i>Page</i>
1 Tachometer	37	16 Engine coolant temperature gauge	36
2 Slip indicator light	208	17 Automatic transmission indicator lights	197
3 Snow mode indicator light	204	18 Cruise control indicator light	205
4 Power mode indicator light	199, 204	19 Low fuel level warning light	51
5 Automatic headlight leveling system warning light	46	20 Fuel filler door indicator	87
6 Low washer fluid warning light	46	21 Fuel gauge	36
7 Vehicle skid control system warning light	47	22 Turn signal indicator light	25
8 Headlight high beam indicator light	24	23 Odometer and trip meter	38
9 Tail light indicator light	22	24 Vehicle skid control system OFF indicator light	210
10 Low engine oil level warning light	44	25 Open door warning light	46
11 Rear light failure warning light	46	26 Malfunction indicator lamp	44
12 Anti-lock brake system warning light	45	27 Low tire pressure warning light	47
13 Discharge warning light	43	28 Driver's seat belt reminder light	42
14 Low engine oil pressure warning light	43	29 Brake system warning light	40
15 SRS warning light	42	30 ODO/TRIP, RESET button	38

For detailed information, refer to the description given in each section.

SEAT AND STEERING WHEEL

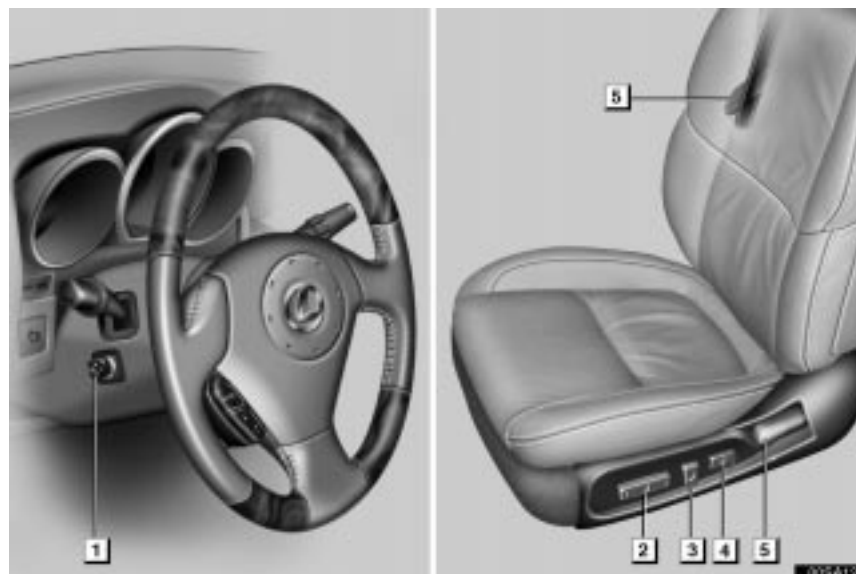


	<i>Page</i>
1 <i>Tilt and telescopic steering adjustment switch</i>	97
2 <i>Seat position, seat cushion angle and height control switch</i> .	93
3 <i>Seatback angle control switch</i> ...	94
4 <i>Lumbar support control switch</i> ..	95
5 <i>Seatback lock release lever</i>	95

For detailed information, refer to the description given in each section.

PICTORIAL INDEX

EXTERIOR VIEW

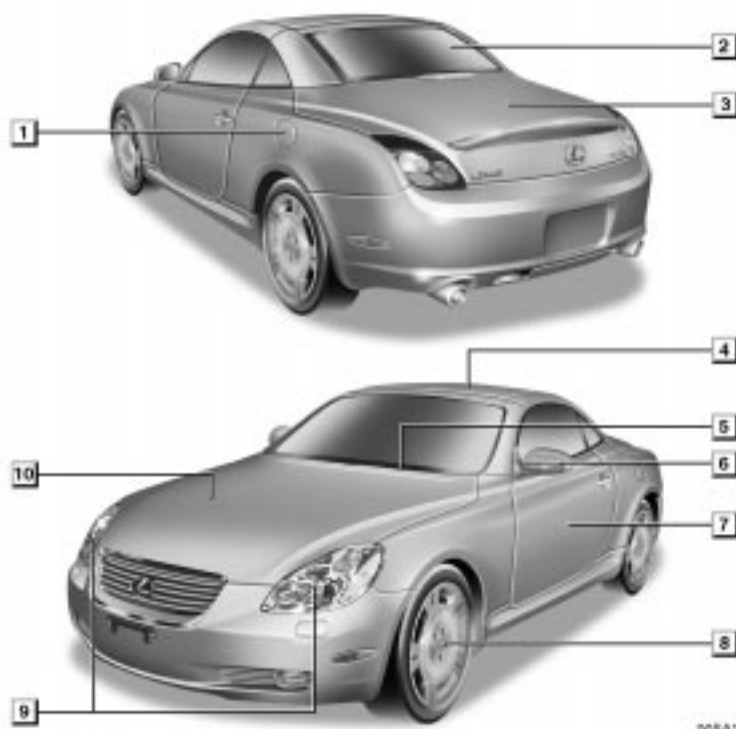

905A11

	<i>Page</i>
1 Fuel filler door	87
2 Rear window defogger	28
3 Trunk lid	85
4 Retractable hardtop	80
5 Wiper and washer	26
6 Outside rear view mirror	98
7 Door	19
8 Tire and wheel	309
9 Headlights	22, 333
10 Hood	84

For detailed information, refer to the description given in each section.

